

CE

# CabKing-6V3

INSTRUCTION MANUAL

# Safety Instructions



## READ ALL INSTRUCTIONS FIRST



For your own safety be sure to read, understand and follow all warnings, safety rules and instructions in this instruction manual before using this machine. Failure to do so can result in serious personal injury.

**WARNING:** This machine includes products that can expose you to chemicals including nickel, which is known to the State of California to cause cancer. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov). This warning applies to the 80# and 220# diamond wheels, and the 360# full face diamond lap.

### Setup safety

- **Know your power tool.** Read this instruction manual carefully. Learn the applications, limitations, specific warnings, and hazards related to this machine.
- **Keep guards in place and secured.** Never operate this machine without hoods. Make sure all guards are operating and properly secured before each use.
- **Intended for indoor use only.**
- **Avoid dangerous environments.** Do not use this machine near gasoline or other flammable liquids.
- **Make sure machine is securely mounted.** Abide by the proper mounting instructions before connecting the tool into a power supply.
- **Use only recommended accessories.** The use of improper accessories on this machine may cause risk of injury.
- **Check for damaged parts.** Before use of this machine, always check for any damaged guards or parts to determine that it will operate properly and perform its intended function. Check for proper alignment of moving parts, binding of moving parts, breakage of parts, mounting and any other conditions that may affect its operation. A guard or other part that is damaged must be properly replaced through the manufacturer of this machine to avoid risk of injury.
- **Use only identical CabKing parts for replacement parts.** Use of any other parts may create a hazard or cause product damage.

# Safety Instructions

---

## Electrical safety

- **Use only grounded outlet or GFCI outlet.** All electrical cords must either be securely grounded, connected to a surge protected outlet, or preferably, connected to a GFCI (Ground Fault Circuit Interrupter) outlet. A GFCI is highly recommended to prevent electric shock. Do NOT use an extension cord.
- **Don't abuse the cord.** Never carry the machine by the cord or yank it to disconnect from receptacle. Keep cord away from heat, oil and sharp edges.

## Usage safety

- **Never disconnect motor, lamp or pump with wet hands.** Though the motor is sealed, you must make sure to keep all electrical connections dry. Avoid touching the pump when connected to the power.
- **Always wear proper eye protection.** Enclosed are safety goggles to protect you from any debris that may fly out while grinding. We recommend wearing the enclosed goggles or safety glasses with side shields. Everyday eyeglasses are NOT safety glasses. If anyone is around the machine while it is in use, they must wear safety glasses.
- **Wear proper apparel.** Do not wear any loose clothing, gloves, neckties or jewelry that can get caught in the machine's moving parts. Long hair must be secured with a rubber band or hair tie.
- **Keep work area well lit, clean, and uncluttered.**
- **Adult supervision is required at all times.** Never leave the machine running unattended.
- **Do not touch motor housing.** Avoid contact with the motor housing when in use. The motor is totally enclosed and non-ventilated so it produces high temperatures. The running temperature can reach around 220°F.
- **Do not operate this machine while under the influence of drugs, alcohol or any medication.**
- **Never run wheels dry.** Make sure there is adequate water used while grinding so that rock dust is not formed. This dust may contain chemicals that can be hazardous to your lungs if inhaled and is known to cause cancer, birth defects or other reproductive harm. To reduce your exposure to these chemicals, work in a well ventilated area and wear a dust mask if the grinding operation is dusty.
- **Use only water as coolant.**
- **Some rocks contain poisonous elements.** Avoid grinding rocks that contain uranium, mercury, lead, arsenic, etc. Know the material you are grinding.
- **Do not force the tool** or attachment to do a job it is not designed to do.
- **Direction of feed.** Be aware of the wheel rotation direction before use.

# Safety Instructions

---

- **Always ease the workpiece against the resin wheels.** A harsh impact can break the wheel. Use light pressure when starting to grind. Too much pressure can cause the wheel to crack.
- **Never grind more than one workpiece at a time.**
- **Never start the machine if a wheel is in contact with a workpiece.**
- **Wheels continue to spin after turn off** eventually slowing to a stop.
- **Avoid awkward operations and hand positions.** Make sure you have good balance while working on this machine. A sudden slip could cause your hand to move into the wheel.
- **Always stay alert.** You must be focused while working on this machine. It is possible for stones to catch on the wheels and be ejected out of the grinding area.

## Maintenance safety

- **Always disconnect power before servicing.** Disconnect machine, lamp and water pump from power before making adjustments and when not in use.
- **Do not open motor.** No user serviceable parts inside.
- **Clean and dry machine after use.**

**SAVE THESE INSTRUCTIONS**

# Table of Contents

---

Safety instructions .....	2
Machine details and parts .....	6
Assembly instructions .....	8
Setting up the water system .....	10
Final assembly .....	11
Machine usage .....	12
How to make a cab .....	13
Maintenance .....	15
Water system parts .....	18
Video tutorials .....	19
Troubleshooting .....	20
Optional accessories .....	22
Warranty info .....	23


## REGISTER YOUR PRODUCT

Scan the QR code on the right to register your CabKing machine. Registering your machine is essential to facilitate any warranty related requests. You can also register your machine at [cabking.com/registration](https://cabking.com/registration) or over the phone with us at (630) 366-6129.



# Machine Details & Parts

What you see below is what the CabKing-6V3 looks like out of the box:

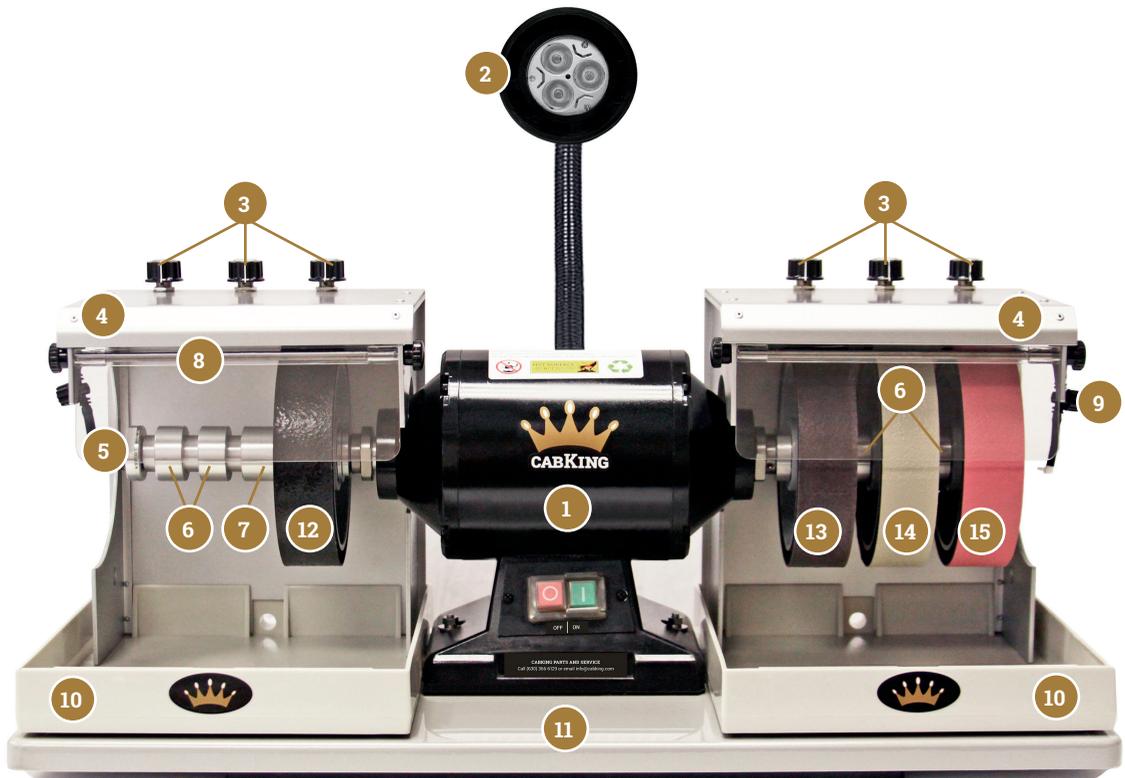

1 Motor

2 Lamp

3 Water control knob (6)

4 Hood (2)

5 Lap adapter

6 3/4" Aluminum spacer (4)

7 1" Aluminum spacer

8 Wheel splash guard (2)

9 Side spray tube (2)

10 Drip pan (2)

11 Baseboard

12 280# Resin wheel

13 600# Resin wheel

14 1,200# Resin wheel

15 3,000# Resin wheel

# Machine Details & Parts

Below is everything included in the CabKing-6V3 accessory box:



80# grinding wheel



220# grinding wheel



360# full face lap



Canvas polishing pad



14,000# diamond paste



Stone tray (2)



Safety goggles



Drip pan tubing (2)



Flange wrench (2)



Allen wrench



Hand rest (2)



Pan splash guard (4)



Water pump



Side panel (2)



Apron




Extra spacers



Pipe cleaner

# Assembly Instructions

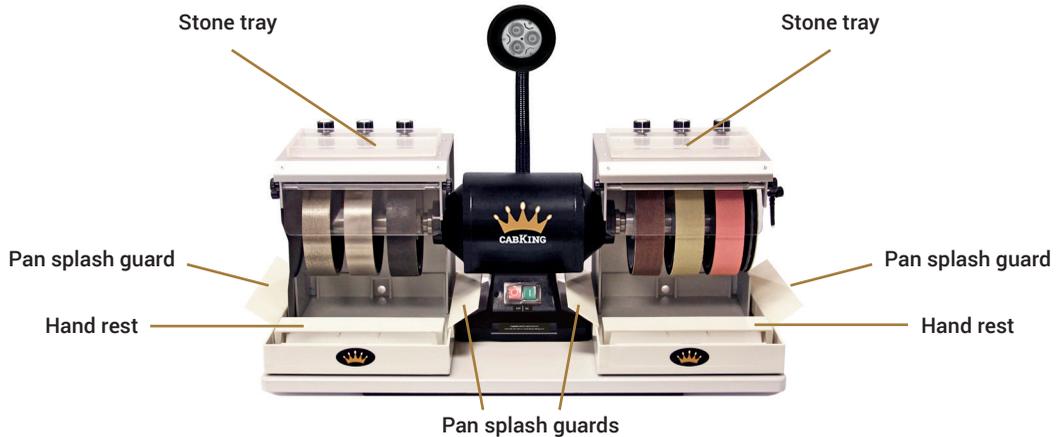

**1** Refer to diagram above for assembly. Determine a suitable, well lit location to place your CabKing-6V3. The machine weighs about 60lbs. You need a sturdy table or stable surface that has 3 feet width by 2 feet depth of clear space.

**2** Open the box and remove all loose foam and accessories. Keep this packaging aside should you need it in the future. Remove the unit from the box by lifting the machine straight up by its baseboard and place in the predetermined location. Do not lift the machine by its hoods or lamp. We recommend that two people help in performing this step. As an option, you can keep the foam that is under the baseboard in place as it will aid in support and vibration. Please note that the baseboard has a rectangular rubber on the bottom so the machine will not sit completely flat.

**3** Check to make sure all parts are present both on the machine and in the accessory box according to the parts list on pages 6 and 7. If you find any missing or damaged parts, call us immediately at (630) 366-6129 or email us at [info@cabking.com](mailto:info@cabking.com).

**4** To complete the left wheel assembly, you need to install the 80# and 220# grinding wheels that are included in your accessory box. Do this by removing the lap adapter on the left shaft with the supplied flange wrench, turning clockwise. Remove the two 3/4" spacers. Leave the 1" spacer on the shaft. Slide the 220# wheel onto the left shaft, ribbed side facing the motor. Then slide the two 3/4" spacers on next. Finish by sliding the 80# wheel onto the left shaft, ribbed side facing the motor, and tighten the lap adapter, turning counter-clockwise using the flange wrench. Upon completion of the left wheel assembly setup, there should be two 3/4"

# Assembly Instructions


---

spacers between the 80# and 220# wheels and one 1" spacer between the 220# and 280# wheels.

**5** Place the clear stone trays on top of the right and left hoods. The stone trays are used to hold your stones and work pieces. Insert the hand rests into the drip pans and slide the splash guards onto both sides of the drip pans. Adjust the position of the splash guards according to the splash.

**6** Optionally, attach the side panels to the hoods. They magnetically attach for easy installation. Install one side panel on the left hood and the other on the right hood, furthest from the motor (Fig. A). Simply move the black side spray tube upwards to attach and remove the side panels. These side panels help control the water splash; however, not installing them provides easier access to the diamond lap and canvas pad.

**Fig. A**

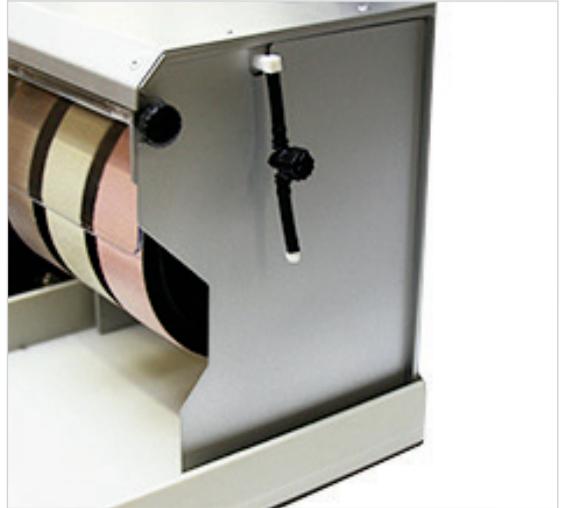

# Setting Up the Water System

The CabKing-6V3 water system is single-pass system, meaning not recirculating. **DO NOT SET UP THE WATER SYSTEM AS A RECIRCULATING SYSTEM.** Read more about the CabKing water system on page 18 after setup.

**7** Connect the water drainage system by attaching the clear drip pan tubing to the rear spout of the drip pans (Fig. B). Secure the connection by positioning the spring clasp so it covers the spouts. Tug on the tubes slightly to make sure they are secured.

**8** Place the unconnected ends of the drip pan tubes into a large, 5-gallon empty bucket (not included) (Fig. C), drain hole or other place you would like the dirty water to drain. It is important that you have the drip pan tubes pointing downward from the machine. This will allow gravity to drain the water from the drip pans. If you notice the drip pans filling up with water, most likely the drain tubes are not sufficiently angled downward. Tilt the drip pans up and shake the tubing to drain. Once you have this properly set up, you may want to cut the tubing so there is no excess slack. This will further help to drain the pans.

**9** **MAKE SURE WATER PUMP IS NOT CONNECTED TO POWER SUPPLY.** Remove the protective backing from the T-junction (found behind the motor) and place the sticky, adhesive side to the baseboard behind the motor, on either side of the lamp (Fig. D). Connect the water intake system by inserting the clear tube from the T-junction into the water pump (Fig. E). Lightly tug on the tubes to make sure they are secured.

**Fig. B**



**Fig. C**



**Fig. D**



**Fig. E**



Place the water pump in a separate, 5-gallon bucket (not included) filled fully with clean water. The length from the bucket to the unit should not be more than 6 feet.

# Final Assembly

---

**10** Twist the water control knobs located on the left and right hoods to the off position. Twist the two side valves on the side spray tubes to the off position. When the black arrow on the side valves are pointed to the left, they are in the off position.

**11** The machine comes with a separate GFCI Plug, plug machine's motor into GFCI plug. GFCI safety plugs are highly recommended to prevent electric shock. Connect the motor power cord into an outlet. Though the motor is sealed, you must make sure to keep all electrical connections dry.

**12** Attach the lamp power cord and water pump to a surge-protected power outlet. The pump has no on/off switch so once you connect it to the power supply, it will start working. **ALWAYS UNPLUG WATER PUMP FROM POWER SOURCE WHEN NOT IN USE.** Avoid touching the water pump in the water bucket with the power on. **NEVER UNPLUG OR TOUCH THE POWER CORDS WITH WET HANDS.**


**13** Adjust the two clear wheel splash guards on the hoods so that the wheels do not make contact with them. **MAKE SURE THE WHEELS ARE NOT IN CONTACT WITH ANY PARTS BEFORE TURNING ON THE MACHINE; THE WHEELS MUST SPIN FREELY.** You can now turn on the machine. The wheels spin at 1800 rpm. It is typical for the motor to produce a winding sound when starting up, and a mild humming sound when turned off. On some occasions, the motor may make a high pitched sound. This is most likely caused

by the space between the unit and the table surface. You can reduce the sound by putting a cloth under the unit. **WHEN TURNING THE MACHINE OFF, THE WHEELS COAST TO A STAND STILL.**

**14** Start the water drip by turning the water control knobs to the on position. Do not turn all of them on at once or you will waste too much water. We suggest turning one on at a time while you work on that wheel. Our unique water system allows you to drip water on each wheel individually. You can adjust the water flow rate to your preference with the water control knobs. While in use, make sure there is enough water dripping so that the wheels do not become dry. **NEVER RUN THE WHEELS DRY.** For instructions on how to use the side spray for the canvas pad or diamond disc, turn to page 14.

**15** You are now ready to start using the CabKing-6V3. **READ THE REST OF THIS INSTRUCTION MANUAL, ESPECIALLY THE SAFETY INSTRUCTIONS, BEFORE USE TO AVOID RISK OF INJURY.**

# Machine Usage

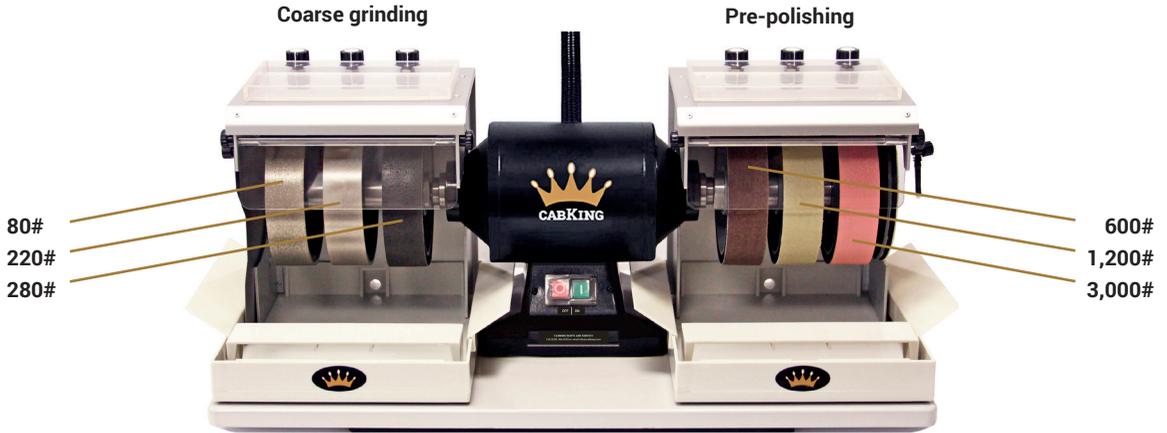


The CabKing-6V3 is configured with two electroplated diamond wheels, four resin diamond wheels, one full face diamond flat lap and one canvas polishing pad. The direct drive motor on the CabKing-6V3 eliminates belts and other exterior motor parts to maintain or replace. The water system is unique and allows you to independently control the water spray on the wheels. Always use adequate water while in use to avoid running the wheels dry. If the wheels become covered with stone residue, increase the water flow. We recommend wearing the included apron to keep you from getting wet while you work.

Another advantage of our water system is that you can adjust the spray direction on each wheel. This allows you to use wheels of different widths. Do this by locating the Y-split, which is located under the hood. Adjust the two nozzles that are inserted into the Y-split by twisting to the left or right (Fig. F).


The CabKing-6V3 grinds and polishes all kinds of shapes and designs out of rock, glass, synthetic material and metal. The most popular use is making cabochons. The general process for making a cabochon on the CabKing-6V3 is described on the following pages.

**Fig. F**

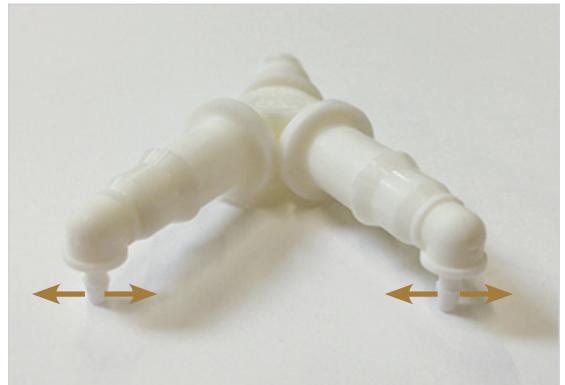

# How to Make a Cab

Transform  
rocks ...

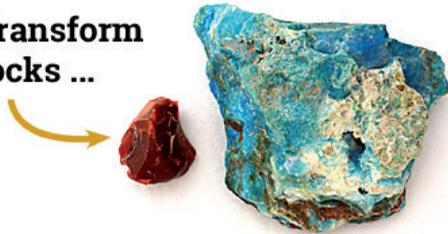

into gems!



## Grinding

Start with the electroplated diamond wheels on the left shaft to complete the grinding process. The grinding process shapes your cabochon and removes any surface irregularities so the stone can be smoothed and polished. Hold your stone freehand or attach it to a dop stick. Begin with the 80# electroplated diamond wheel. Completely grind the surface of the stone using adequate water. If the stone is not ground thoroughly, scratching will occur. Making sure that all scratches are removed is the most important part of grinding a cabochon. We recommend frequently drying your cabochon with a paper towel or clean rag to reveal the remaining scratches while you work. Repeat this process for the 220# electroplated diamond wheel.

## Pre-polishing

Once you are done grinding and shaping your cabochon on the electroplated diamond wheels, proceed to the resin wheel sequence. Resin wheels sand and smooth away flat spots, scratches and tiny bumps that are left behind from the grinding wheels in your stone, resulting in a pre-polished cabochon.

*Important notes: The supplied CabKing resin wheels are formulated to be used exclusively together in sequence. To avoid scratching or uneven grinding/polishing, do not mix and match other brands of resin wheels with the CabKing resin wheels. PLEASE READ THE RESIN WHEEL NOTICES DOCUMENT THAT IS INCLUDED WITH YOUR INSTRUCTION MANUAL.*

The resin wheel sequence starts with the 280# resin wheel and proceeds to the 600#, 1,200#, and lastly the 3,000#. Thoroughly grind and smooth your stone on each wheel, moving onto the next wheel when finished. After you complete the resin wheel sequence, your cabochon will be ready for polishing. Adjust the lamp as you work to provide additional light.

# How to Make a Cab

## Polishing


To put the final polish on your stone, attach the included canvas polishing pad by screwing it into the end of the right wheel assembly while the machine is turned off. Using the included 14,000# diamond paste syringe, apply a series of small dots, randomly throughout the pad, starting from the center of the pad, moving to the outer edge of the pad. Using your finger, smear the small dots into the canvas polishing pad. While diamond paste puts a bright, shiny polish on most stones, there are other ways to polish your stones such as using diamond powder or cerium oxide.

Now that the canvas polishing pad is charged with the diamond paste, it is ready for use. Most diamond pastes can be used without water however, you may use water while your polishing. To use with water, aim the black side spray tube to the center of the disc. You want to aim the side spray tube to the center of the disc because when the disc is spinning, the water will spread evenly throughout the surface of the canvas polishing pad. Easily adjust the water drip to your preference by moving the black side spray tube and white nozzle to the left or right (Fig. G).

*Important note: Only use one mesh per canvas polishing pad. Do not mix different mesh on the same pad or scratching may occur.*

If you plan to insert your polished cabochon

Fig. G

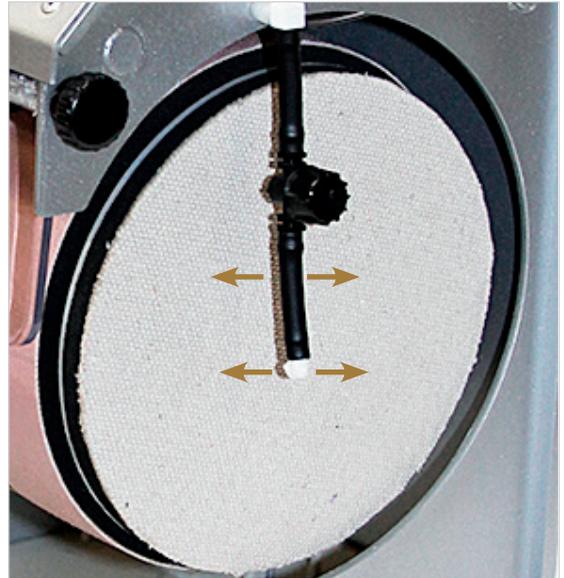

into a jewelry finding, you will need to put a flat on the backside of your cabochon. To do this, attach the included full face diamond lap by screwing it into the end of the right wheel assembly while the machine is turned off. The full face diamond lap must be used with water. Just like the canvas polishing pad, aim the black side spray tube to the center of the disc and adjust the water drip to your preference by moving the black side spray tube and white nozzle to the left or right.

*Important note: The canvas polishing pad and full face diamond lap are to be used on the right shaft ONLY.*

# Maintenance

The CabKing-6V3 is designed as a maintenance-free unit. There are no belts, pulleys, gears or other parts to actively maintain. However, all parts should be cleaned manually.

## Changing the wheels

The wheels included with the CabKing-6V3 are 6" diameter x 1.5" width with 1" arbor holes. The CabKing-6V3 only uses wheels with 1" arbor holes. Color of wheel hub may vary. The wheels are attached onto two assemblies of three wheels each. Each separate assembly is spun onto the left and right side of the motor. The left and right wheel assemblies are shown in Fig. H.


BEFORE REMOVING EITHER WHEEL ASSEMBLY, TURN OFF MACHINE AND WAIT FOR THE WHEELS TO COAST TO A STAND STILL. Slide the clear splash guards into the up position and move the drip pans backwards to remove the hoods. Use the included flange wrench to secure the metal motor shaft flange located on the inside part of the left and right shaft, closest to the motor (Fig. I). It is important to secure the motor shaft flange with the flange wrench while completing this step because this prevents the shaft from spinning while you are removing the wheel assembly. With the flange secured, turn the wheels towards you to slide off. *Note: Use the extra flange wrench included with your accessories to remove or tighten the wheel assemblies.*

Once the wheel assembly is removed from the motor shaft, you can change out the individual wheels. Important note: The wheels on the left and right shafts are removed differently.

Fig. H



Fig. I

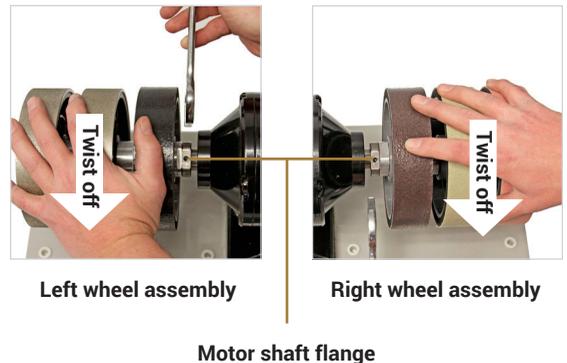


# Maintenance

## Disassembling the left wheel assembly

The left wheel assembly is assembled onto an aluminum shaft (Fig. J). Remove the lap adapter with the flange wrench, turning clockwise. Once the lap adapter is removed, slide the wheels off of the left shaft (these are the 80#, 220# and 280# wheels). The slotted bolt on the end of the lap adapter is used to attach an optional 1/2" arbor lap (remove bolt by turning clockwise). *Note: Lap adapter may be brass or aluminum.*

Fig. J

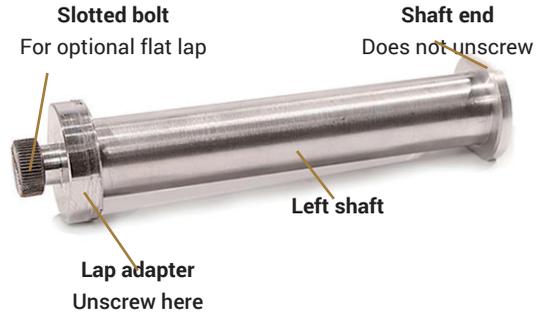

## Disassembling the right wheel assembly

The right wheel assembly is assembled onto an aluminum shaft (Fig. K). Remove the end nut with the flange wrench, turning clockwise. The end nut is located to the left of the 600# resin wheel. Once the end nut is removed, slide the wheels off of the right shaft (these are the 600#, 1,200# and 3,000# resin wheels).

Fig. K



# Maintenance


## Tightening the motor shaft flange

If you notice that the wheel assemblies are not coming off or that the motor shaft flange is spinning, you need to tighten the motor shaft flange using the included Allen wrench. Take the Allen wrench and insert it into the set-screw located in the motor shaft flange (Fig. L). Turn clockwise to tighten.

## LED light bulb

The light bulb installed in the lamp is LED and will last a long time. Should you need a replacement, please contact our customer service team. The LED light bulb installed in the CabKing lamp is specially designed for this machine and can't be found elsewhere.

Fig. L

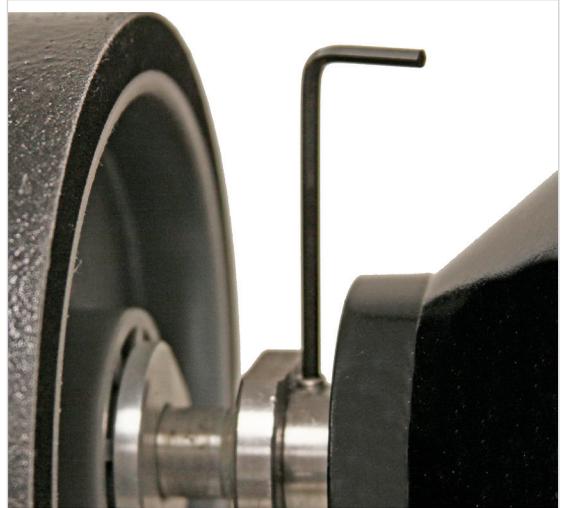

## Watch our online video tutorials

Learn from the professionals while they show you new machine assembly techniques and offer troubleshooting advice.

[cabking.com/videos](http://cabking.com/videos)


# Water System Parts

One of the key features to the CabKing-6V3 is the single pass, contamination-free water system. The water system will remain trouble-free as long as you use a fresh, clean supply of water. Do this by using a separate intake water bucket from the drainage bucket. A fresh supply of water will protect you from cross-contamination of grit which can occur in recirculating systems that use a bubbler or geyser. With fresh water, the pump and intake tubes will stay clean and unobstructed so there will be enough water pressure. The water pump is rated at 30 watts, 605GPH, 8.2ftHmax. We recommend using a minimum 5 gallon bucket for both the water pump and drainage. You will typically go through an average of 1-2 gallons of water per hour, with the water control knobs on a light to medium drip. Monitor the water level in the bucket to make sure the water pump is always submerged in water. **THE WATER PUMP SHOULD NOT BE RUN DRY. UNPLUG WATER PUMP FROM POWER SOURCE WHEN NOT IN USE.**

By design, all water system parts can be easily disassembled by pulling off or unscrewing and cleaned with soapy water. For routine maintenance, keep the nozzles, Y-split and tubing clean with a small wire brush or the included pipe cleaner.

**DO NOT SET-UP THE WATER SYSTEM AS A RECIRCULATING SYSTEM. THIS WILL VOID YOUR WARRANTY.** This means putting the drip pan tubes into the same bucket of water as your water pump. Doing so will void your warranty and you also risk cross-contamination of grit, which may result in scratches on your stone. The grit will eventually build up in the water control valves, nozzles and tubing which will restrict water flow and potentially clog the water system parts.

Underneath each hood are three Y-splits with two nozzles in each, three needle valves and clear tubing that connects to each needle valve. The clear tubing measures 1/4" outer diameter x 1/8" inner diameter. See image below to identify parts.

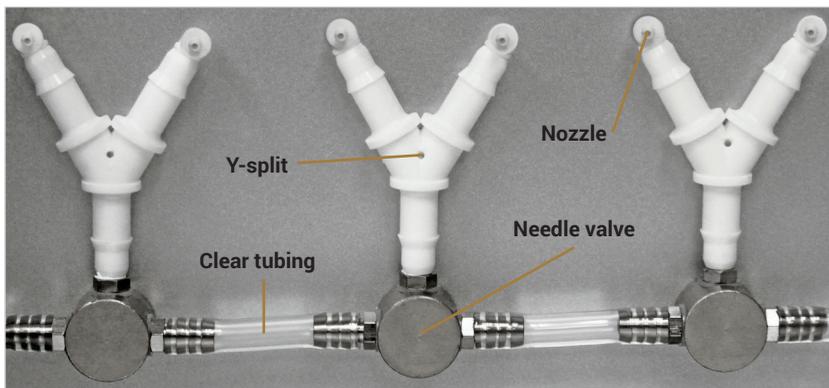

# Video Tutorials

Learn from the professionals while they show you new machine assembly techniques and offer troubleshooting advice.

[cabking.com/videos](https://cabking.com/videos)



# Troubleshooting

<b>Problem</b>	<b>Recommended solution</b>
<b>Parts are missing or damaged</b>	Contact us directly by calling (630) 366-6129 or send us an email at <a href="mailto:info@cabking.com">info@cabking.com</a> .
<b>Motor is hot</b>	This is normal. By design, the motor is totally enclosed and non-ventilated so it produces high temperatures. The temperature range is 190°- 220°F. Avoid contact with the housing.
<b>Motor makes a high pitched sound</b>	This is typically due to the table or platform that the machine is placed on. Place cardboard or cloth under the machine to absorb the vibration.
<b>Motor vibrates or shakes</b>	Make sure the wheels are properly balanced. Wheels can become unbalanced during shipping. This can be fixed by taking the wheels off and realigning them. Make sure the shafts are tightened.
<b>Wheels don't turn</b>	Make sure power is connected and machine is turned on.
	Make sure the wheels are not obstructed. If the wheels are caught on something before you turn on the motor, there will not be enough momentum to start spinning.
<b>Water control knobs keep spinning</b>	Tighten the set screw located inside the water control knobs using a 2mm Allen wrench (not included).

# Troubleshooting

<b>Problem</b>	<b>Recommended solution</b>
<b>Water flow is weak or doesn't flow at all</b>	Make sure there is enough water in the bucket with the water pump.
	Make sure the water pump is connected to a power supply.
	Make sure all water tubes are connected properly.
	Clean the nozzles and Y-splits with the included pipe cleaner.
<b>Drip pans do not drain</b>	Shake the drip pan tubes to start the flow while tilting the drip pans upwards.
	Make sure the drip pan tubes are angled downwards. Tubes should also be cut to length after setting up the unit.
	Clean the drip pan outspout.
<b>Nozzle/water system parts are loose or fall off</b>	We suggest using Teflon tape and wrapping the portion of the nozzle that is inserted into the Y-split with enough tape to secure the fit.

# Optional Accessories

All CabKing-6V3 accessories can be purchased directly at [cabking.com](http://cabking.com).



## 6" Trim saw attachment

The trim saw attachment allows you to cut, grind and polish with just one machine. It fits on the right shaft of the CabKing-6V3. Each saw attachment comes with one 8" diameter sintered saw blade.



## 6" Diamond grinding wheels

Our nickel electroplated diamond wheels are used for rough grinding and pre-forming your material. Each wheel comes with a plastic hub in a variety of different grits. These are the 80# and 220# wheels that originally came with your unit.



## 6" Diamond resin wheels

Our resin wheels are used for finer grinding and forming, cabbing and contour grinding. Each wheel has a medium density foam backing with a plastic hub in a variety of different grits. These are the 280#, 600#, 1,200# and 3,000# wheels that originally came with your unit.



## 6" Full face diamond laps

These full face diamond laps are used on the right shaft of the CabKing-6V3 to give you a flat surface for grinding and pre-forming your material. Each lap comes with a 1/4"-20 thread in a variety of different grits. This is the 360# full face lap that originally came with your unit.



## 6" Diamond laps

These diamond laps are used on the lap adapter on the left shaft of the CabKing-6V3 to perform both rough and fine grinding on stones and glass. Each lap comes with a 1/2" arbor hole that is pre-bound to an acrylic backing plate. A variety of different grits are available.

# Warranty Info

This CabKing-6V3 is warranted by the manufacturer to be free from defect for the period of one full year from the purchase date.

## What does this warranty cover?

This warranty covers all mechanical and structural parts of the CabKing-6V3, such as the motor, water pump, baseboard, etc.

## What does this warranty not cover?

This warranty does not cover any consumable goods such as diamond abrasives, light bulbs and/or polishing pastes. This warranty also does not cover any abuse, misuse, intentional damage, incorrect usage, failure to take care of the machine, improperly following the instructions, servicing by someone other than CabKing personnel and/or theft/loss.

## Who is covered under this warranty?

This warranty only covers the original purchaser of the equipment. It is non-transferable.

## What is the warranty period?

The warranty is in force for one year from the date of purchase. Please retain the original invoice of your machine for proof of warranty or register your CabKing-6V3.

## Need our warranty service?

Contact us directly and we will assist you. You can either call us at (630) 366-6129 or email us at [info@cabking.com](mailto:info@cabking.com). Shipping to us will be at your expense. If your machine is determined to be under warranty, we will pay for return shipping. You must PROVE that you are under warranty by providing us with the original invoice of your machine or by registering your CabKing-6V3 to receive our warranty service.



Protect your investment and extend this manufacturer's warranty another 1-2 years! For more details and/or to purchase, visit [cabking.com](http://cabking.com) or call (630) 366-6129.

*Important note: You have up to 45 days from the purchase date of this CabKing machine to add this extended warranty.*



**Manufactured (using foreign and domestic parts) by**

Reentel International Inc.  
44 Plaza Drive, Westmont, IL 60559  
USA

**CabKing helpline**

1 (630) 366-6129

**Email**

[info@cabking.com](mailto:info@cabking.com)

**Website**

[cabking.com](http://cabking.com)

**Facebook**

[facebook.com/TheCabKing](https://facebook.com/TheCabKing)

**Instagram**

[instagram.com/CabKing](https://instagram.com/CabKing)

**YouTube**

[youtube.com/CabKing](https://youtube.com/CabKing)